

## ADEMCO 5814

### DOOR/WINDOW TRANSMITTER

#### INSTALLATION INSTRUCTIONS

Use the 5814 Door/Window Transmitter only with alarm systems that support 5800 series wireless devices. The transmitter has its own unique serial number permanently assigned during manufacture, which must be entered into the control panel prior to the transmitter's usage. Refer to the control unit's installation instructions for programming details.

**Note:** During programming of the control unit, 5814 transmitters should be treated as "RF" (i.e. supervised RF) Type (*mandatory for UL installations*). The 5814 is assigned one zone.

#### MOUNTING


The unit is generally mounted as shown in the diagram, with the magnet located to the unit's right. However, it can be installed in *any* position, as long as the relationship of the unit to the magnet is maintained.

Before mounting the transmitter permanently, conduct Go/No Go tests (see control's instructions) to verify adequate signal strength from the mounting location.

1. **Mount using double-faced tape** (supplied) by affixing it to the back of the unit and mounting the unit in place.

**Warning:** Do not mount unit in a location where temperature may approach freezing point (32°F).

2. **Mount the magnet** (supplied) adjacent to the alignment mark on the unit's case (see Diagram).

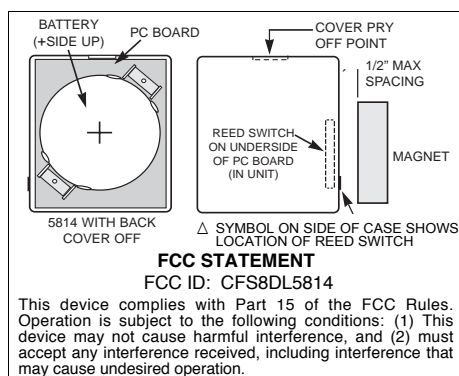

#### SPECIFICATIONS

##### Unit Dimensions:

1-1/2" (37mm) x 1-3/16" (30mm) x 5/8" (15mm)

**Battery:** Duracell DL2430 or Renata/Sanyo/Varta CR2430

REFER TO THE INSTALLATION INSTRUCTIONS FOR THE RECEIVER/CONTROL WITH WHICH THIS DEVICE IS USED FOR WARRANTY INFORMATION, AND DETAILS REGARDING THE LIMITATIONS OF THE ENTIRE ALARM SYSTEM.

